
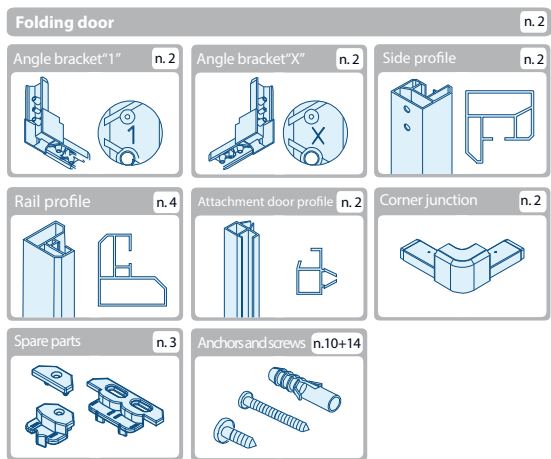



FIRST STAGE

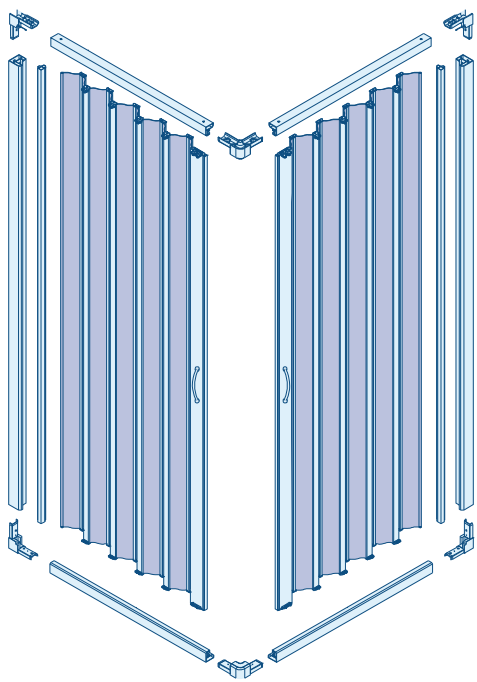

Assembly tools


Level, pencil, awl, hammer, drill, drill bit 6 mm, cross screwdriver, silicone caulking gun.

SECOND STAGE

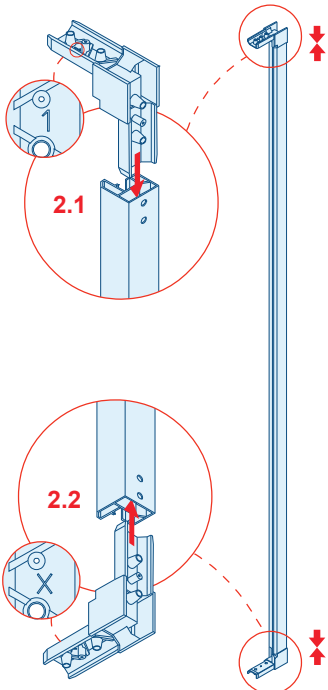

Side profile section


: Inner side shower compartment

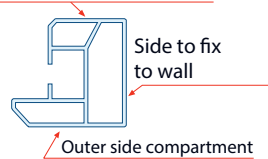

Assembly instructions


Take the right-side profile and place it, as shown in the figure, with the widest part facing outward. Place an angle bracket marked by the number "1" in the upper part (Fig. 2.1) and an angle bracket marked by an "X" in the lower part (Fig. 2.2). **IMPORTANT:** The sides of the angle bracket marked by the "X" and "1" should not be inserted within the profile, but must remain outside, so that symbols remain visible.

THIRD STAGE

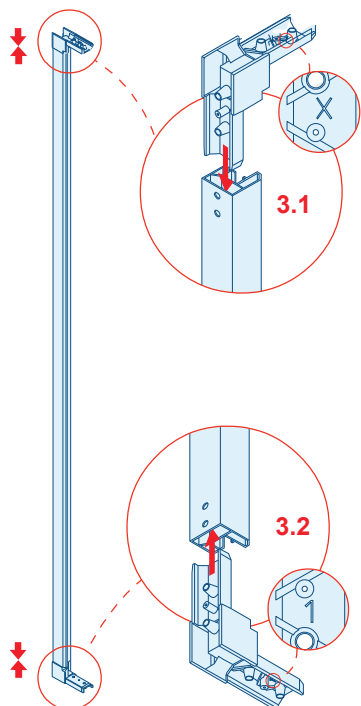

Side profile section


Inner side shower compartment

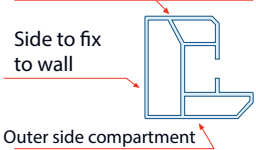

Assembly instructions

Take the left-side profile and place it, as shown in the figure, with the widest part facing outward. Place an angle bracket marked by the number "1" in the upper part (Fig. 3.1) and an angle bracket marked by an "X" in the lower part (Fig. 3.2). **IMPORTANT:** The sides of the angle bracket marked by the "X" and "1" should not be inserted within the profile, but must remain outside, so that symbols remain visible.


FOURTH STAGE

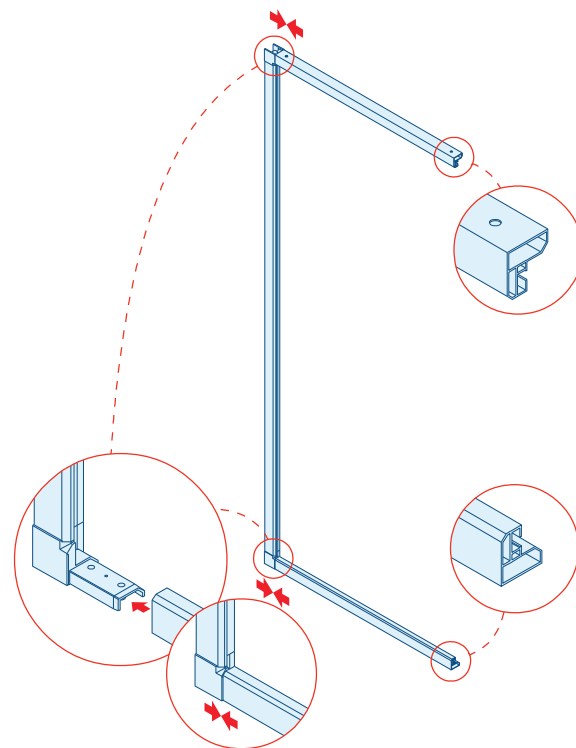

Assembly instructions

Insert the upper and lower rail profile in the angle brackets of the previously assembled left side profile.


FIFTH STAGE

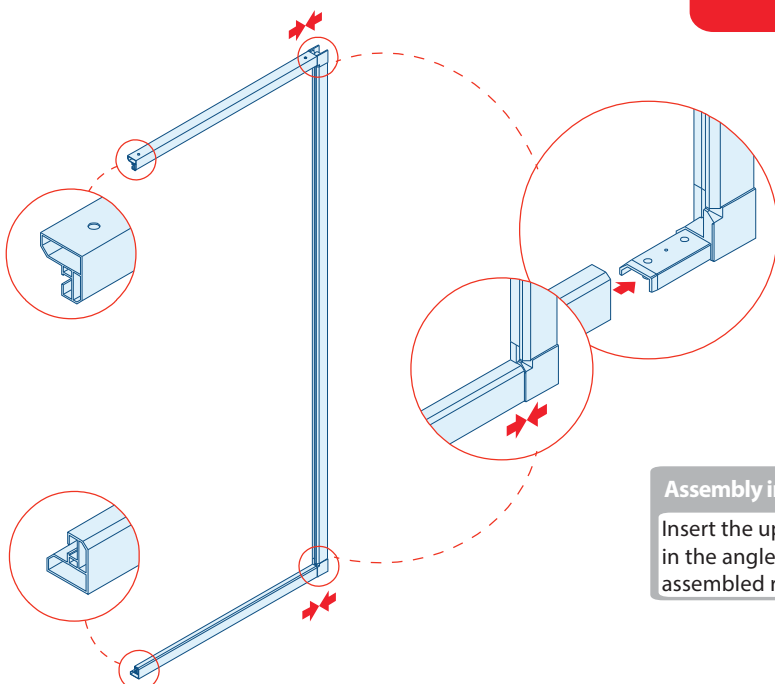

Assembly instructions

Insert the upper and lower rail profile in the angle brackets of the previously assembled right side profile.

SIXTH STAGE

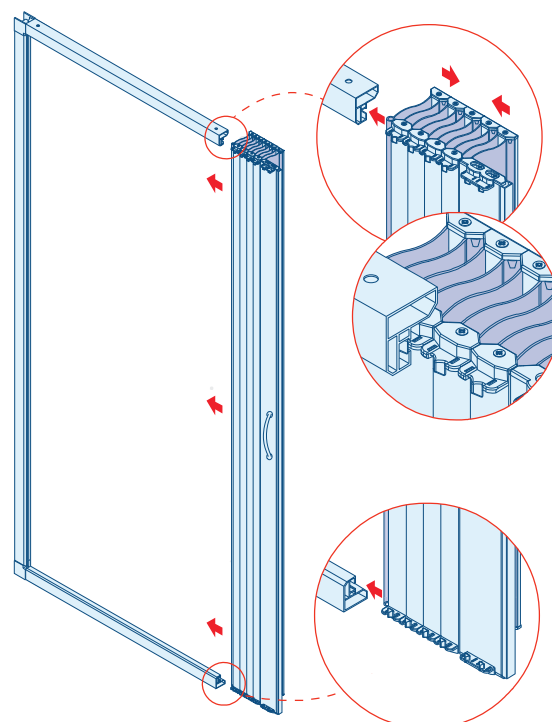

Assembly instructions


Slide the folding door in both upper and lower rail profile, as shown in figure, making sure that all door supports are inserted in the rail profile.

ASSEMBLY INSTRUCTIONS

ACQUARIO

SIDE OPENING


SEVENTH STAGE

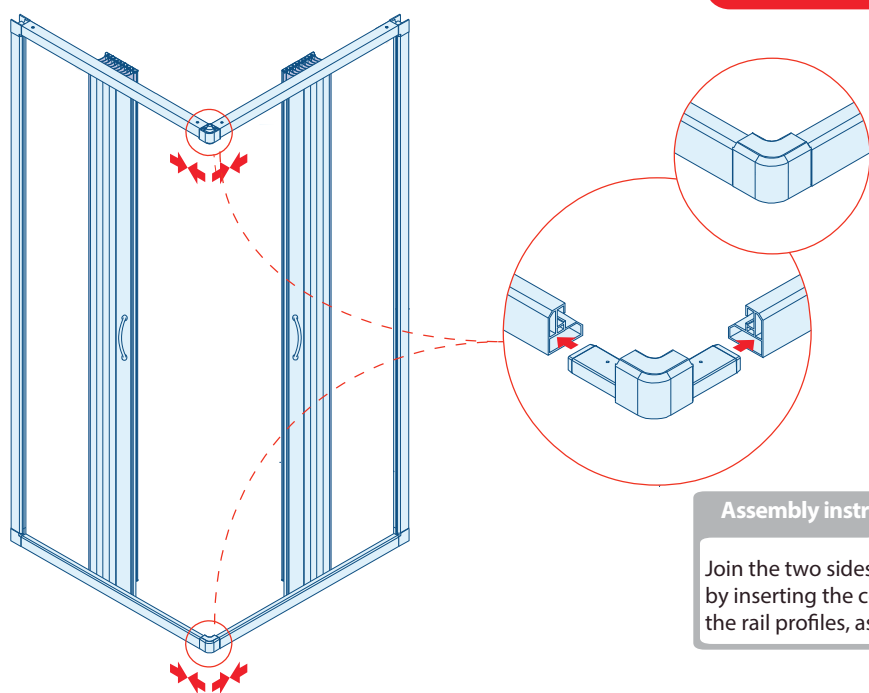

Assembly instructions

Join the two sides of the enclosure, by inserting the corner junctions in the rail profiles, as shown in figure.


EIGHTH STAGE

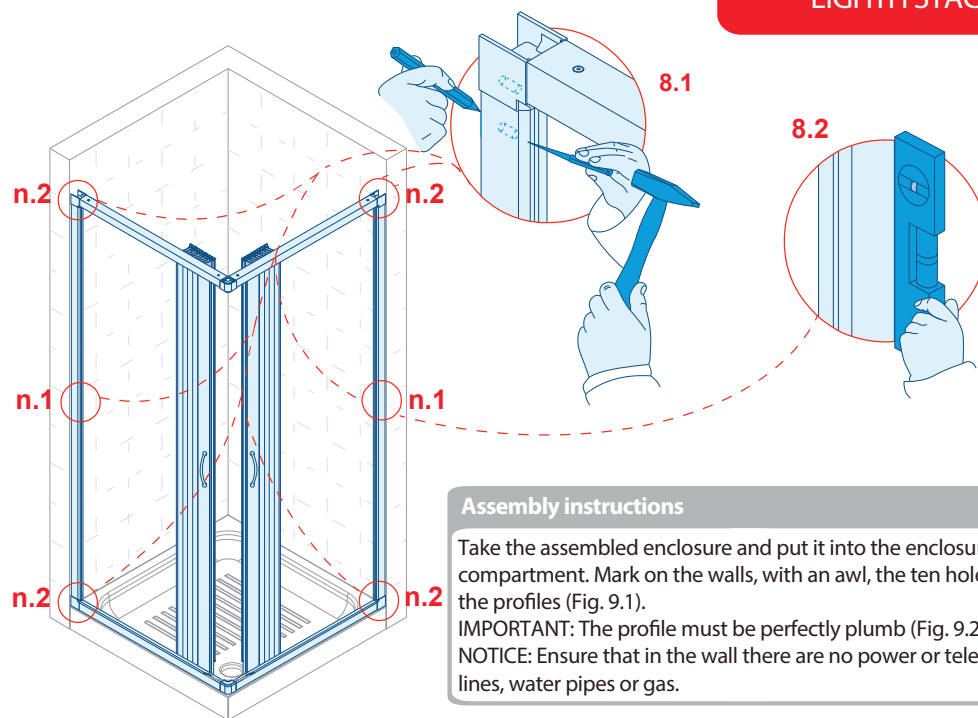

Assembly instructions

Take the assembled enclosure and put it into the enclosure compartment. Mark on the walls, with an awl, the ten holes on the profiles (Fig. 9.1).
IMPORTANT: The profile must be perfectly plumb (Fig. 9.2).
NOTICE: Ensure that in the wall there are no power or telephone lines, water pipes or gas.


NINTH STAGE

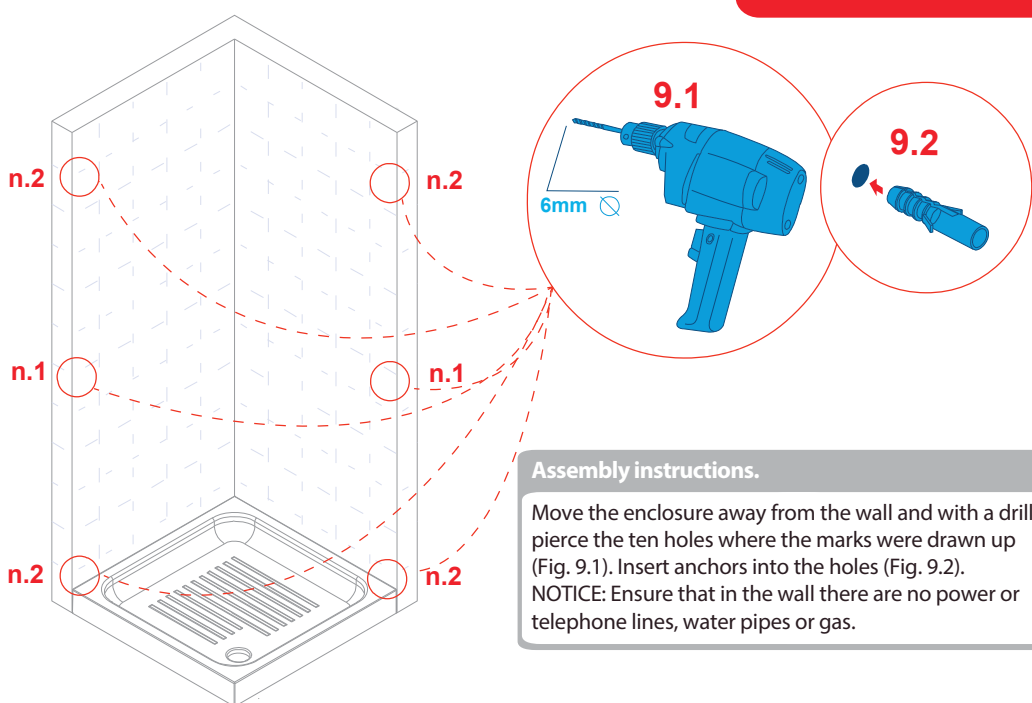

Assembly instructions.

Move the enclosure away from the wall and with a drill pierce the ten holes where the marks were drawn up (Fig. 9.1). Insert anchors into the holes (Fig. 9.2).
NOTICE: Ensure that in the wall there are no power or telephone lines, water pipes or gas.


TENTH STAGE

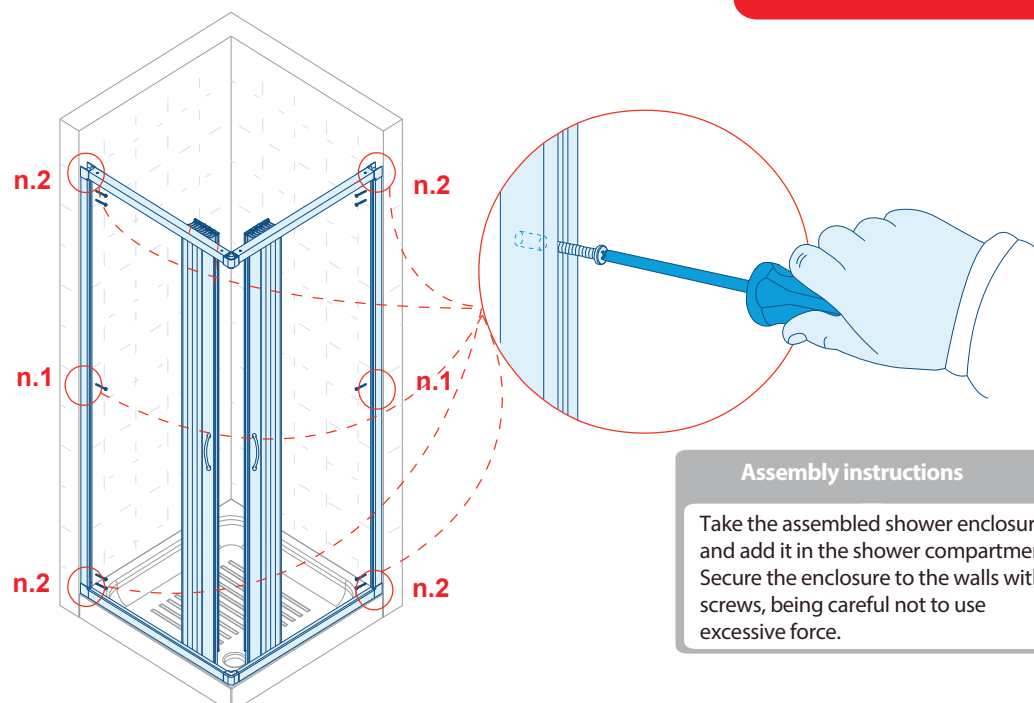

Assembly instructions

Take the assembled shower enclosure and add it in the shower compartment. Secure the enclosure to the walls with screws, being careful not to use excessive force.


ELEVENTH STAGE

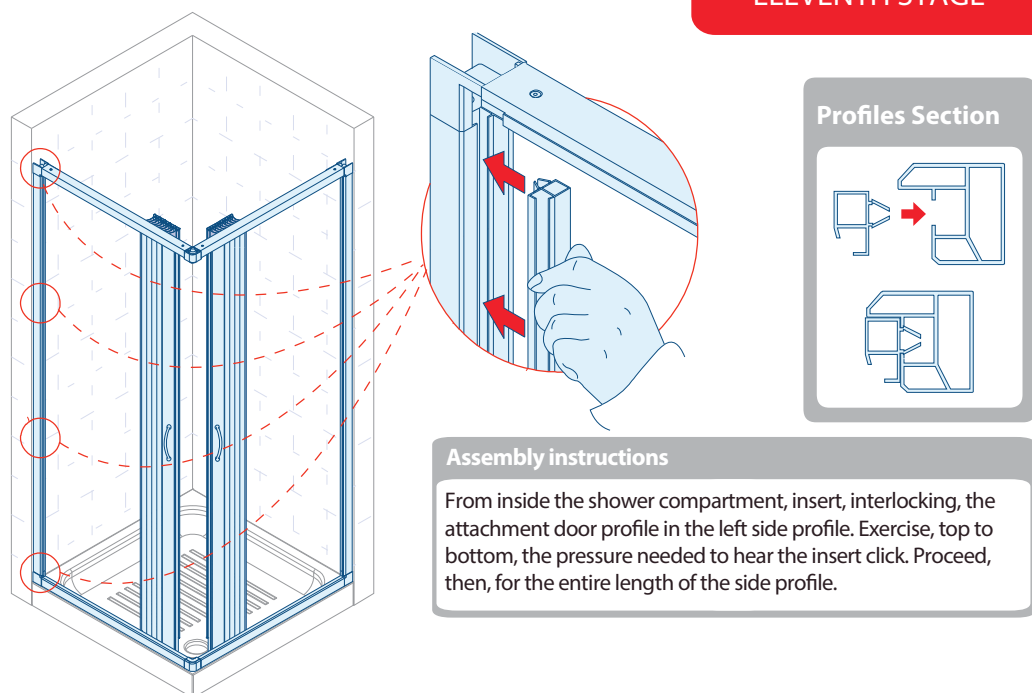

Assembly instructions

From inside the shower compartment, insert, interlocking, the attachment door profile in the left side profile. Exercise, top to bottom, the pressure needed to hear the insert click. Proceed, then, for the entire length of the side profile.


TWELFTH STAGE

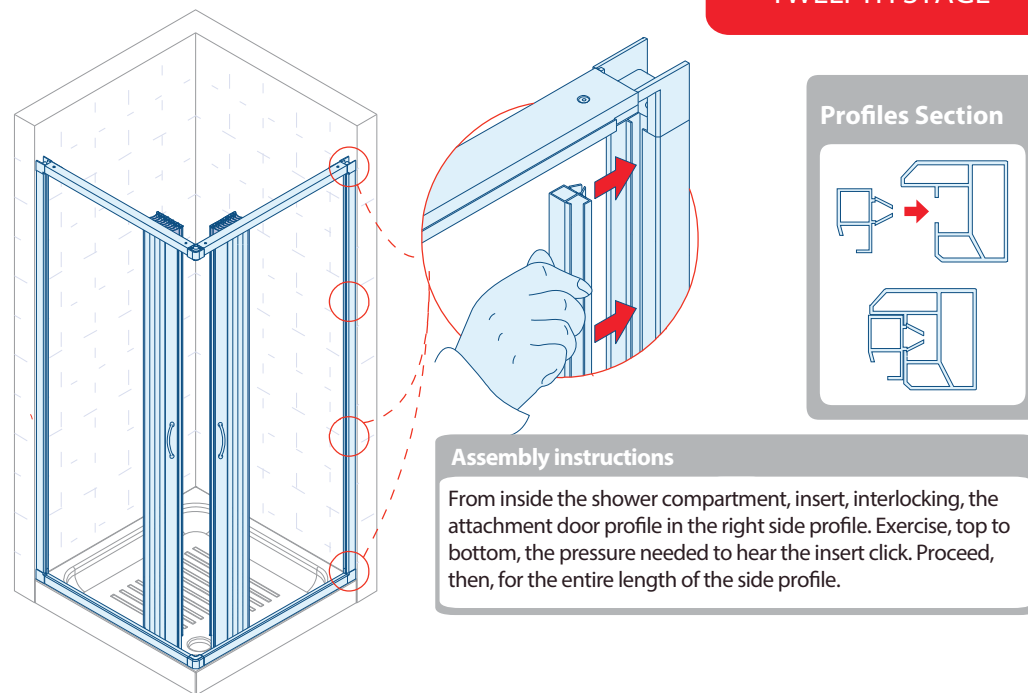

Assembly instructions

From inside the shower compartment, insert, interlocking, the attachment door profile in the right side profile. Exercise, top to bottom, the pressure needed to hear the insert click. Proceed, then, for the entire length of the side profile.


THIRTEENTH STAGE

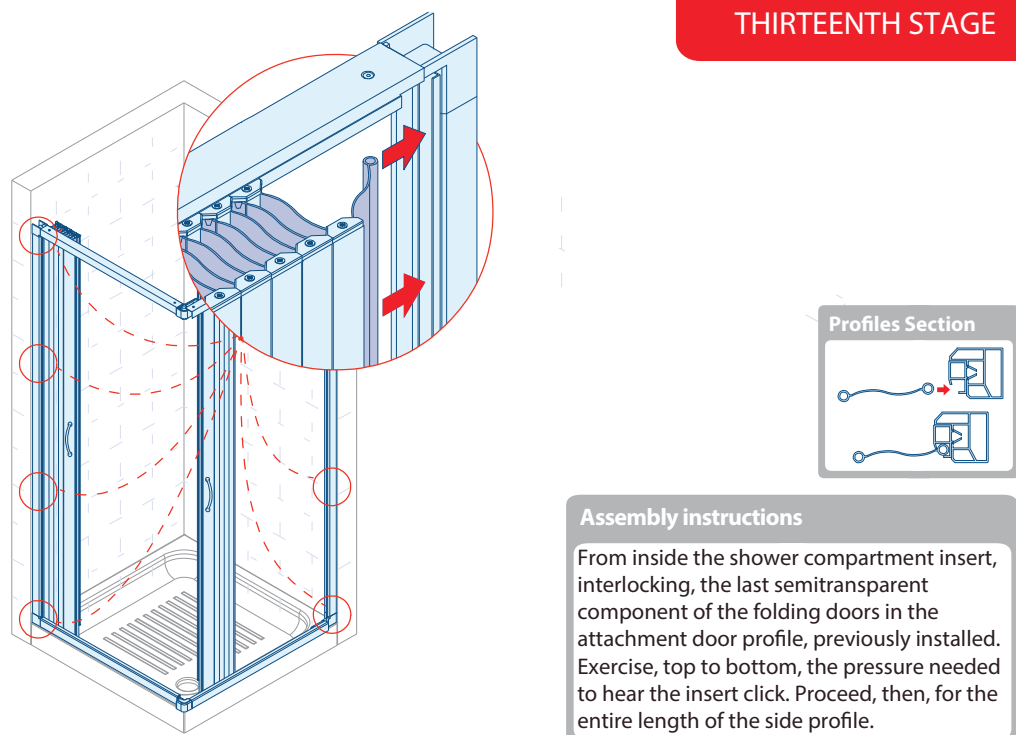

Assembly instructions

From inside the shower compartment insert, interlocking, the last semitransparent component of the folding doors in the attachment door profile, previously installed. Exercise, top to bottom, the pressure needed to hear the insert click. Proceed, then, for the entire length of the side profile.

FOURTEENTH STAGE

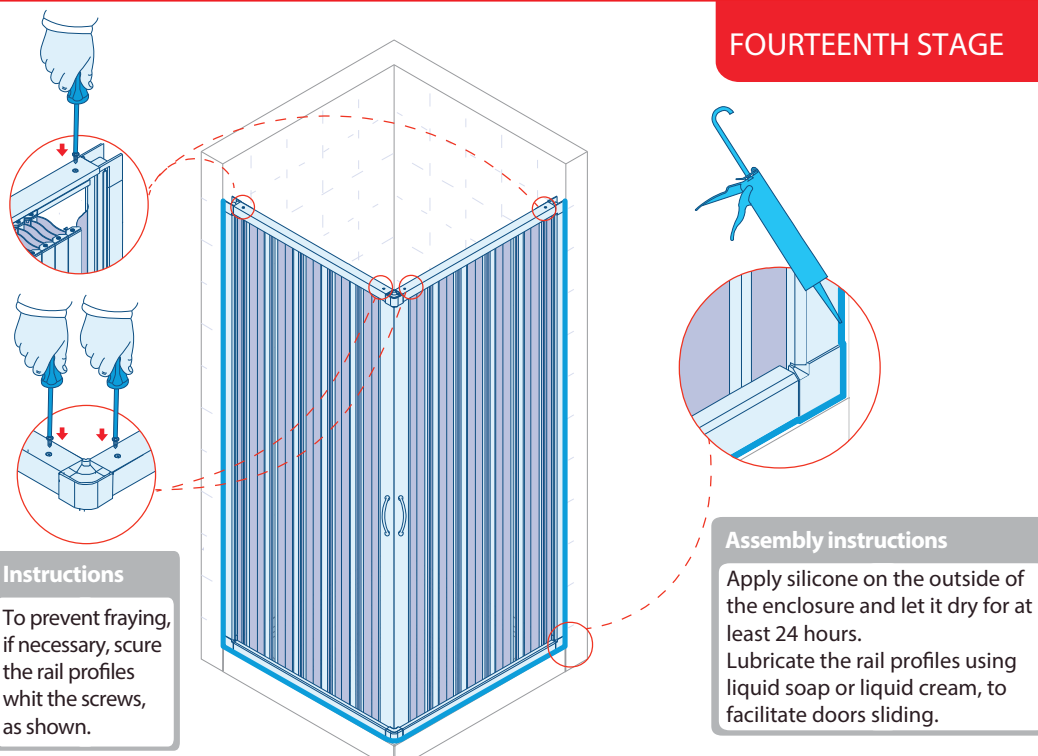

Instructions

To prevent fraying, if necessary, scure the rail profiles whit the screws, as shown.

Assembly instructions

Apply silicone on the outside of the enclosure and let it dry for at least 24 hours. Lubricate the rail profiles using liquid soap or liquid cream, to facilitate doors sliding.